



Independent PIR infrared detection alarm

user's manual

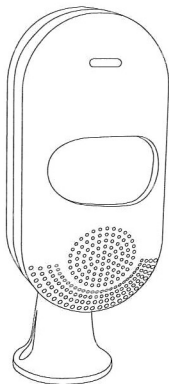


Product diagram

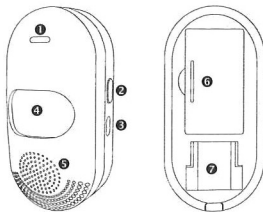

① LED lights	② Set key
③ USB power port	④ Detection window
⑤ buzzer	⑥ Battery compartment
⑦ Bracket slot	

First use


1. Mounting brackets

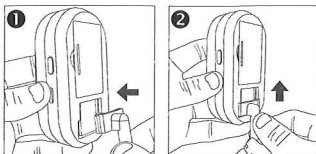


2. Connect to power




3. Turn on (enter induction alarm)

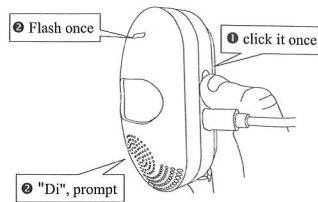

4. Trigger induction alarm

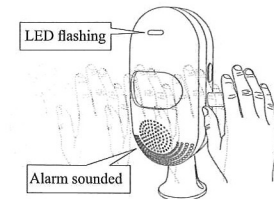

5. Turn off the sensor alarm

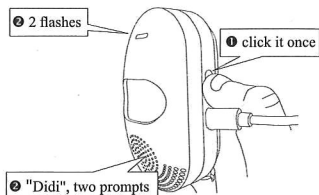

Mobile app

1. Download app



Tuya Smart



Smart Life

- Scan the QR code to download the APP.
- IOS: Download the "Tuya Smart" or "Smart Life" at APP Store.
- Android: Download the "Tuya Smart" or "Smart Life" at Google Play.

2. Register/login Tuya Smart




3. Network configuration with mobile phone (two methods)

Method 1: Wi-Fi quick connect


①



②

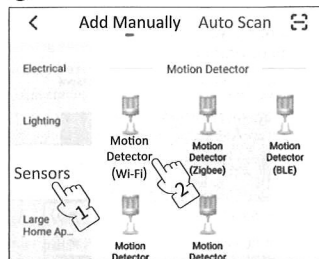

③

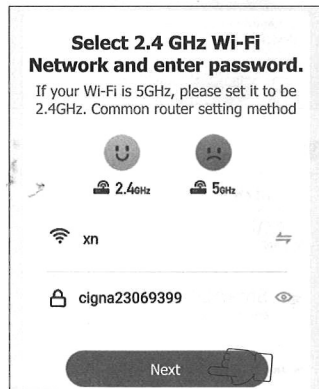

③

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz. Common router setting method



2.4GHz

5GHz




xn

🔒 cigna23069399

Next

④

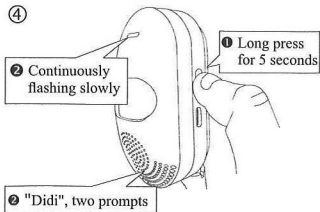

Observe whether the LED light flashes slowly. If it is not flashing slowly, press and hold for another 5 seconds.

⑤


Cancel

EZ Mode ⇌

Reset the device first.

Power on the device and confirm that the indicator is blinking rapidly.

Note: please complete the network distribution within 3 minutes after resetting the device.



⑥

Cancel

EZ Mode ⇌

Reset the device

Power on the device and confirm that the indicator is blinking rapidly.

Note: please complete the network distribution within 3 minutes after resetting the device.

EZ Mode Default

AP Mode

⑦

Cancel

AP Mode ⇌

Reset the device first.

Please power on the device and confirm that the indicator is blinking slowly.

Note: please complete the network distribution within 3 minutes after resetting the device.



Perform net pairing as prompted. >


✓ Confirm the indicator is blinking slowly.

Next


⑧

Connect your mobile phone to the device's hotspot

1. Please connect your phone to the hotspot shown below

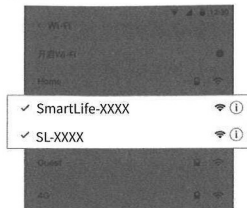

2. Return to this app and continue adding devices



⑨



⑩

Adding device...


Ensure that the device is powered on.



⑪




Working status selection

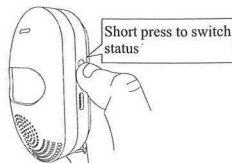


Prompt sound	Alarm lamp	Status
Di	Blink 1 time	Turn on sensor alarm
Didi	2 flashes	Turn off the sensor alarm

Installation

1. Installation method

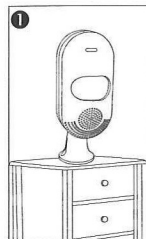

Place the table
(recommended)

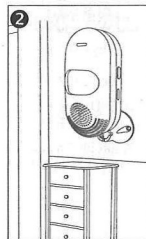

Wall installation

③

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz. Common router setting method




xn

🔒 cigna23069399

Next

④

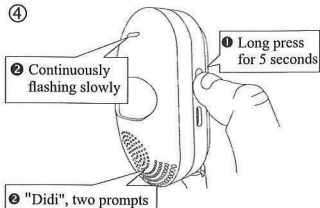

③ "Didi", two prompts



Observe whether the LED light flashes slowly. If it is not flashing slowly, press and hold for another 5 seconds.

⑤

Cancel

EZ Mode ⇌

Reset the device first.

Power on the device and confirm that the indicator is blinking rapidly.
Note: please complete the network distribution within 3 minutes after resetting the device.



⑥

Cancel

EZ Mode ⇌

Reset the device first.

Power on the device and confirm that the indicator is blinking slowly.
Note: please complete the network distribution within 3 minutes after resetting the device.

EZ Mode

Default

AP Mode




⑦

Cancel

AP Mode ⇌

Reset the device first.

Please power on the device and confirm that the indicator is blinking slowly.
Note: please complete the network distribution within 3 minutes after resetting the device.

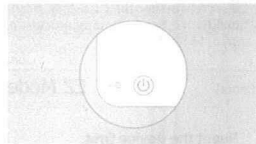

Perform net pairing as prompted. >

Confirm the indicator is blinking slowly.



Next